


PreFormed® Shower Pan

You will never go back to your old ways, once you install a PreFormed® Ready-To-Tile Shower Pan. It weighs a third less than comparable fiberglass or plastic showers. The drain is built-in and adjustable for your chosen tile thickness. It is easy to handle and install.

Most importantly, the pans come 100% waterproof and will never rot or degrade. Shower pans come with a standard 6" integrated side splash and curb so you don't need special framing or waterproofing. Every pan is sloped to 1/4" per foot and no mud float is needed. Time saving... Waterproof... Worry Free. The difference is **CLEAR.**

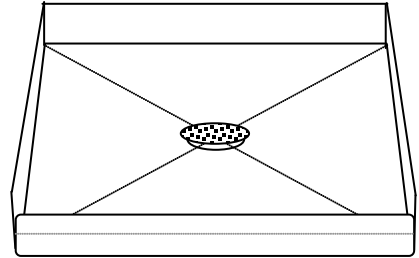

Note: It is the user's responsibility to ensure waterproofness prior to tiling.

INSTALLATION

1. Sub floor under shower pan must be clean and level. Cut PVC or ABS drainpipe off flush with the subfloor.
2. Remove square top strainer from the drain, allowing access to line up the drainpipe from the top.
3. TEST FIT** shower pan to be sure it fits over the drainpipe properly and sits flush and level with the floor.
4. Remove the shower pan.
5. Apply a Polymer Modified Portland Cement Medium Bed thinset using a 1/2" x 1/2" square notch or 19/32" half moon trowel, completely covering the area beneath the pan.
6. Apply liberal coating of PVC* or ABS* solvent cement to the drainpipe and inside the drain where the connection will be made. **Solvent choice based on drain type. Always follow solvent manufacturer's instructions.*
7. Set pan into the wet thinset and apply pressure to achieve complete coverage.
8. Plug the inside of the drainpipe and fill the shower pan with water for 24 hours. Repair leaks before proceeding.
9. Apply Util-A-Crete®, ProTEC™, or ProPanel® backer board to the walls, coming flush with the top of the shower pan sides.
10. Seal the joint between the backer board and the shower pan using a Latex Polymer Liquid Waterproof Membrane and fiberglass reinforced mesh.
11. Install tile.

Shower Pan Sizes with center drain location (In Stock except where *noted):

- *PF 110: 32" x 60"
- PF 111: 34" x 48"
- PF 112: 36" x 36"
- PF 113: 36" x 42"
- *PF 114: 36" x 48"
- PF 115: 36" x 60"
- PF 116: 42" x 42"
- PF 117: 48" x 48"

*PFCustom

*** Please allow 2 weeks lead time for these models**

Custom sizes available upon request. An exact drawing with dimensions, drain location, and curb location is needed.

**For Technical Assistance Call:
 Fin Pan, Inc.
 800.833.6444**

**PreFormed® Component's Warranty will be voided if pan is modified on the jobsite. Waterproofing should not be compromised. PreFormed® Ready-To-Tile Components must be installed per Manufacturer's Instructions.

Stryfoam® is a registered trademark of The Dow Chemical Corporation, U.S.A.

Distributed by Fin Pan, Inc. P.O. Box 411 Hamilton, OH 45012 513-870-9200 • 800.833.6444

Manufactured by T. Clear Corp. P.O. Box 416 Hamilton, OH 45012 513-870-9246 • 800.544.7398

PreFormed®, Util-A-Crete®, ProTEC™, or ProPanel® are registered trademarks of Fin Pan, Inc. 800.833.6444

T. Clear Corporation is a subsidiary of Fin Pan, Inc.